HOLDEN

*LUGGAGE COMPARTMENT FUSE BOX TYPE B**

FUSE REPLACEMENT

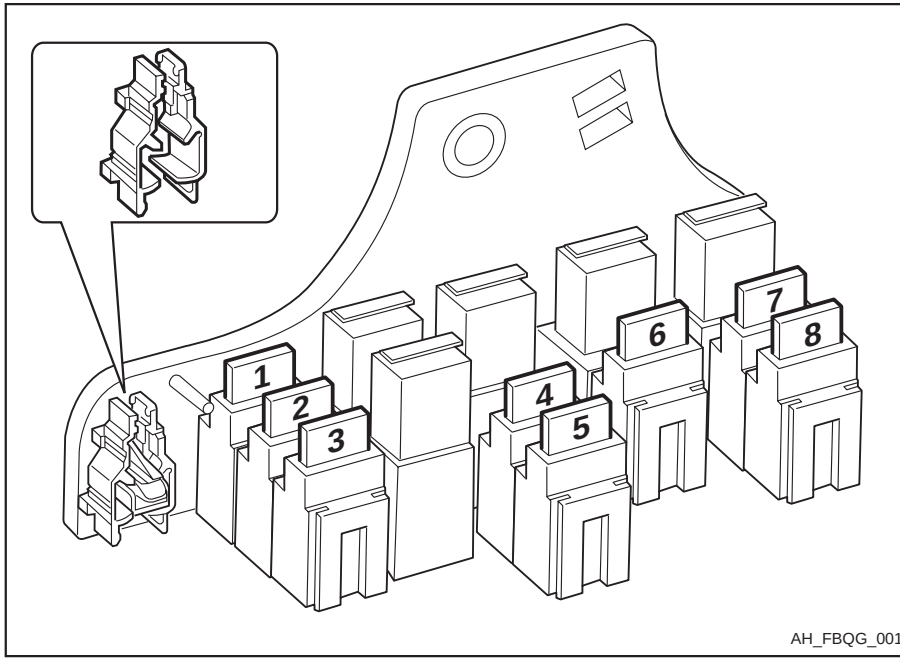

- Before replacing a fuse, turn off the respective switch and remove the ignition key.
- To help replace fuses, a special fuse gripping tool (shown above) is provided on the left-hand side of the fuse box.
- Slot the fuse gripping tool onto the fuse and withdraw the fuse.

FUSE LAYOUT INDEX:

1 - FOG LAMPS ..... (15A)
2 - – –
3 - LUGGAGE COMPARTMENT ACCESSORY SOCKET ..... (15A)
4 - REVERSE LAMPS ..... (7.5A)
5 - ELECTRIC WINDOWS, REAR ..... (30A)
6 - AIR CONDITIONING SYSTEM ..... (10A)
7 - ELECTRIC WINDOWS, FRONT ..... (30A)
8 - HEATED EXTERIOR MIRRORS ..... (7.5A)

Note See overleaf for references to the owner's handbook.

*LUGGAGE COMPARTMENT FUSE BOX TYPE B cont**

REFERENCES TO THE OWNER'S HANDBOOK

- For instructions on how to access this fuse box refer to page 6-31 of the owner's handbook.
- For instructions and warnings regarding the replacement of fuses refer to page 6-33 of the owner's handbook.

*The asterisk signifies equipment options not in all vehicles; model variants, engine options, optional equipment and Genuine Holden Accessories (and Parts).

Printed in Australia
May 2007 (AH luggage compartment fuse box type B quick guide. Print 1)

© 2007 GM Holden Ltd
Reproduction in whole or part is prohibited
without written approval from GM Holden Ltd,
ABN 84 006 893 232

HOLDEN

GM Holden Ltd, ABN 84 006 893 232 (hereinafter Holden)

This supplement should be kept together with the owner's handbook in the glovebox of your vehicle.